

Caller ID Telephone

Soft
USER'S MANUAL



AEG

TABLE OF CONTENTS

FEATURE LIST	1
SAFETY INSTRUCTIONS	2
INTRODUCTION	3
LOCATION OF CONTROLS	4
WALL MOUNTING	5
FUNCTION BUTTONS	6
SETTINGS	8
RECEIVING CALL RECORDS	11
CALLER ID SYSTEM OPERATIONS	12

● Using the call back feature

1. *Calling back outgoing calls: The unit can store up to 20 outgoing numbers (each number can be up to 18 digits)*

- Use **OUT** button to scroll through the dialled number list until you find the telephone number you wish to dial.
- Press **REDIAL** button to dial it.

2. *Calling back incoming calls: The unit can store up to 66 incoming numbers (each number can be up to 16 digits)*

- Use **▲** or **▼** button to scroll through the caller display list until you find the telephone number you wish to dial.
- Press **REDIAL** button to dial it.

CALLER ID SYSTEM OPERATIONS

Subscription to Caller ID service from your local phone company is required before initial use.

● Reviewing call records

a. Reviewing incoming numbers

Either in the on-hook or off-hook state, press ▲ or ▼ button to scroll through the incoming caller list directly. You can review the records quickly by holding ▲ or ▼ button for more than 3 seconds.

b. Reviewing outgoing numbers

Either in the on-hook or off-hook state, press **OUT** button once and the last outgoing number will show on the LCD, press **OUT** button repeatedly to review other records or review the records quickly by holding **OUT** button for more than 3 seconds.

● Saving call records

Saving specific calls by deleting old or unnecessary call records.

NOTE: If the memory is full, when a new call comes in, the oldest record will be erased to make room for the new call record automatically.

● Deleting function

When you reviewing the incoming/outgoing numbers, press **DEL** button to delete the record shown on the LCD. If you press and hold this button for more than 4 seconds, all the incoming/outgoing records will be removed.

During pre-dialling a number, press **DEL** button to delete the incorrect digits.

FEATURE LIST

1. FSK+DTMF dual system Caller ID
2. Stores up to 66 incoming calls number, date & time
3. Stores up to 20 outgoing calls number
4. Delete individual or all records
5. LCD contrast adjusting
6. Real time clock (Set time)
7. Area code setting
8. IP code setting
9. Alert function
10. Private/Repeat/Out of area/Error indicators
11. Ring and In use Indicator
12. Dialing mode selection
13. Last number redial
14. Speakerphone
15. Call back function
16. Wall mounting function
17. Ringer volume switch
18. Pause function
19. Flash time setting
20. 3 one-touch memories
21. Message waiting function

SAFETY INSTRUCTIONS

To reduce the risk of fire, electrical shock, and injury, please follow these basic safety precautions before you use this equipment.

1. Carefully read the instructions in this manual.
2. Follow all warnings and instructions marked on the unit.
3. When cleaning, unplug the telephone jack from the wall outlet. Use a damp cloth. **DO NOT** use liquid or aerosol cleaners.
4. Do not use this equipment near water, eg: near a kitchen sink, bathtub, washbowl, laundry tub, swimming pool or in a wet basement.
5. Install in a protected location. Ensure all lines and cords are away from foot traffic. **DO NOT** place objects on the line cord that may cause damage or abrasion.
6. Avoid spilling any liquid on the unit. This may cause internal shorting, fire or shock and is not covered under your warranty.
7. Do not overload wall outlets and extension cords as this can result in the risk of fire or electrical shock.
8. Never push objects of any kind into this telephone as they can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
9. Take the phone to a qualified technician when it requires repair work or service. To reduce the risk of electrical shock, do not disassemble the telephone. Opening or removing covers can expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electrical shock during subsequent use.
10. Avoid using the telephone during an electrical storm. There can be a slight risk of electrical shock from lightning.
11. **DO NOT** use the telephone to report a gas leak, if in the vicinity of the leak.
12. Unplug this telephone from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - If liquid is spilled into the unit.
 - If the unit is exposed to rain or water.
 - If the unit does not operate normally by following the operating instructions.
 - If the unit is dropped or the casing is damaged.
 - If the unit exhibits a distinct change in performance.

RECEIVING CALL RECORDS

In standby mode: In this mode, the LCD will show the total number of calls, date and the real time.

New call indicator: When a new call is received, the **NEW** icon will appear and flash on the LCD. After it has been reviewed, the **NEW** icon will disappear.

Repeat indicator: If the call comes repeatedly, the **REP** icon will appear.

Incoming call indicator: When a new call is coming or when you are reviewing the incoming numbers, the **IN** icon and the call sequence will show on the LCD.

Outgoing call indicator: When you are reviewing the outgoing numbers, the **OUT** icon and the call sequence will show on the LCD.

Private indicator: If the caller has exercised the option to prevent his number from being sent, the **----**P**----** will be shown on the LCD.

Out of area indicator: When someone calls from an area where the telephone company is not offering the caller identification services or an area that is not yet providing number delivery to your area via the long distance network. In this state the LCD will show **----** O **----**.

Error : If the phone can not recognize the information within the caller display messages, it will show **----**E**----** instead of the message.

Message waiting indicator: When somebody leaves messages in the mail box, the **MAIL** icon will appear.

NOTE: If you turn the auto IP on, when you dial a number ahead with "0", the phone will dial out the IP code first.

● **Dialling mode setting** When the LCD shows SET 6 P-T, press **SET** button to confirm and the LCD shows the current setting (PULSE or TONE). Use ▲ or ▼ button to select the desired dialling mode, press **SET** button to confirm and enter the next setting mode automatically. The LCD will show SET 7 ALERT.

● **Alert setting** When the LCD shows SET 7 ALERT, press **SET** button to confirm and the current setting is displayed. The sequence digit on the left will flash, press ▲ or ▼ button to select the digit (1-3). There are 3 groups of alert time for setting. Then press **SET** button to confirm and enter the alert time setting. Press ▲ or ▼ button to select the digit and then the **SET** button to confirm. After setting alert time, ON or OFF will flash on the LCD. Press ▲ or ▼ button to select ON or OFF to activate or deactivate the alert function. Then press **SET** button to confirm and enter the next setting mode automatically. The LCD will show SET 8 Hour. (The menu SET 8 Hour is invalid.)

NOTE: When the alert sounds, press any key to switch it off.

● **LCD contrast setting** When the LCD shows SET 9 LCD, press **SET** button to confirm and the LCD shows the current setting. For example, LCD 3. Use ▲ or ▼ button to select the LCD contrast level (5 levels for choosing), press **SET** button to confirm then press **DEL** button to exit.

INTRODUCTION

CHECK THE CONTENTS OF THE BOX

Box should contain:

- Handset with handset cord and phone base
- Telephone line cord
- User's manual
- Bracket

BATTERY INSTALLATION



The Caller ID phone requires three 1.5V AA size batteries (not supplied) to keep the information stored in the phone.

1. Remove the battery cover from the back of your Caller ID phone
2. Insert three 1.5V AA size batteries by observing the +/- polarity marked in the compartment.
3. Replace battery compartment cover.

CONNECTING LINE CORDS

Plug one end of the supplied modular cord into the line jack. Then plug the other end into telephone wall line jack.

LOCATION OF CONTROLS

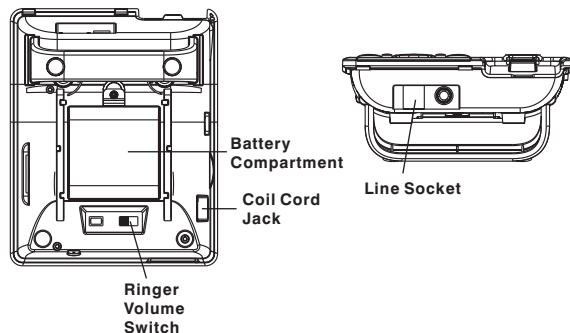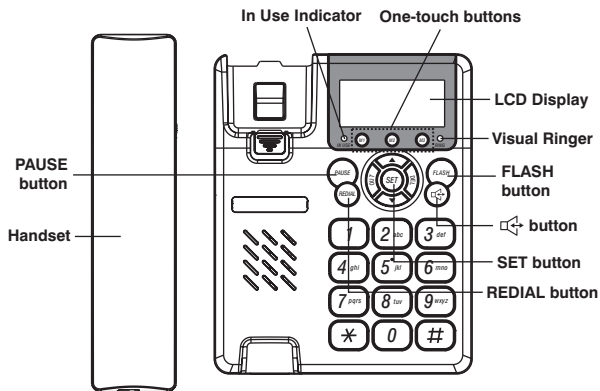

confirm and enter the next item (up to 5 digits). When the setting finished you can press **SET** button to confirm and enter the next setting mode automatically. The LCD will show SET 3 PCODE.

● **Out of system code setting** When the LCD shows SET 3 PCODE, press **SET** button to confirm and enter the out of system code setting, then the current setting PCODE -- or the code you set before will show on the LCD. Press **▲** or **▼** button to set it. Press **SET** button to confirm and enter the next item (2 digits length). For example, if you set the code "13", when you pre-dial a number which is more than 6 digits and begin without "13", press the **REDIAL** button to dial it out with adding 13 before it automatically. When the setting is finished, you can press **SET** button to confirm and enter the next setting mode automatically. The LCD will show SET 4 FLASH.

● **Flash time setting** When the LCD shows SET 4 FLASH, press **SET** button to confirm and enter the setting, the LCD shows the current setting FLASH X XXXX. Use **▲** or **▼** button to select one (1000ms / 600ms / 300ms / 100ms) and press **SET** button to confirm and enter the next setting mode automatically. The LCD will show SET 5 IP.

● **IP code setting** When the LCD shows SET 5 IP, press **SET** button to confirm. You can press **▲** or **▼** button to select 1 AUTO IP (the menu 2 FREE IP is invalid), press **SET** button to enter. The LCD shows AUTO IP ON, press **SET** button. The current setting is displayed. If you enter the menu for the first time, the LCD indicates you to input the IP code (up to 40 digits). Use **DEL** button to edit it if necessary. Press **SET** button to confirm and enter the next setting mode automatically. The LCD will show SET 6 P-I.

SETTINGS

This unit has the following special settings: **Time & date setting**, **Area code setting**, **Out of system code setting**, **Flash time setting**, **IP number setting**, **Dial mode setting**, **Alert setting**, **LCD contrast setting**.

In the on-hook state, press **SET** button to enter the setting mode and the LCD shows SET 1 DATE.

NOTE: After you enter the setting mode, you can press ▲ or ▼ button to select the desired menu or press **DEL** button to exit or do these settings in sequence as following steps:

● **Time & date setting** Press **SET** button again to enter the time & date setting mode and the digits for year will flash, use ▲ or ▼ button to select the desired number, press **SET** button to confirm and enter the next item. The setting sequence is YEAR-MONTH-DAY-HOUR-MINUTE. (When the date has been set, the matching week day will automatically show on the middle line). When the setting is finished you can press **SET** button to confirm and enter the next setting mode automatically. The LCD will show SET 2 CODE.

● **Area code setting** In some countries, if you have to call somebody living in your city area (phone district) you do not have to dial the related area code. With this feature you can set up your area code in order to avoid its dialing every time you call back somebody using a number from incoming calls list.

When the LCD shows SET 2 CODE, press **SET** button to confirm and enter the area code setting, the LCD shows CODE - - - - or the area code you set before. Press ▲ or ▼ button to set it. Press **SET** button to

WALL MOUNTING

1. If you would like to put your phone on the desktop, please install the bracket as figure 1.

2. If you prefer to mount the phone on the wall, please remove the bracket and do the following steps as figure 2.

- Install the two self-tapping screws (not supplied) at a distance of 67mm from each other and located on a horizontal line.
- Slowly slide the unit down until it snaps into place.

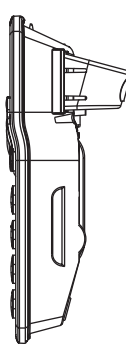


Figure 1

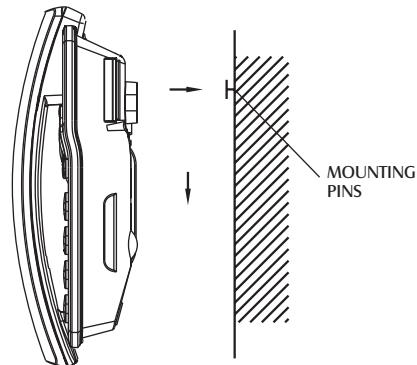


Figure 2

FUNCTION BUTTONS

 
1. Ringer volume selection

Set the ringer volume switch to the desired position (**HI/LO/OFF**). To have the maximum ringer volume, move the ringer volume switch to the **HI** position. To have a low ringer volume, move the ringer volume switch to the **LO** position. If you would prefer the ringer not to disturb you, move the ringer volume switch to the **OFF** position.

 
2. Preparation dialing function

In the standby mode, pre-dial the telephone number you want to call (you can check the number before dialing and use **DEL** button to delete the incorrect digit), then press **REDIAL** button to dial it out.

3. Speaker Function

To switch your call to speakerphone, press the  button and replace the handset in the cradle. To switch back, just pick up the handset. In speaker state, you can make or answer calls.

4. Redial Function

Lift the handset or press the  button, then press the **REDIAL** button to redial the last dialled number.

5. SET Button

In the standby mode, press the **SET** button to enter the menu.

6. DEL Button

 

In the on-hook state, press the **DEL** button to delete the incorrect digit when you set the code. In menu mode, use the button to exit from the menu. When the LCD shows the CID number, press the button to delete the record. If you hold the button for more than 3 seconds, all the CID numbers will be deleted.

7. One-touch memory

You can store 3 telephone numbers in the one-touch memory.

a. Storing a number in the memory

In on-hook state:

1. Press  or  button to select the incoming number or **OUT** button repeatedly to select the outgoing number you desire or input the telephone number manually.

2. Press the **SET** button and the LCD shows *STORE IN*.

3. Press the desired location button (**M1 ~ M3**) to store the number.

NOTE: To update the number stored in the one-touch memory, just repeat above steps to store a new number to replace the old one.

b. Dialling a number from the one-touch memory

Either in on-hook or off-hook state, you can press one of the memory button (**M1 ~ M3**) to dial out the matching number.

8. Pause Function

This feature allows you to insert a temporary pause during dialling sequence. For example, dialling an international number (e.g.: 011-886-22-795-1234), some telephone company systems will not register the entire number entry without a pause between the prefix numbers. You may have to dial 011-**PAUSE**, dial 886-**PAUSE**. This allows adequate time for the phone number to register with the telephone company's system and complete the call.

9. FLASH button

Press **FLASH** button to terminate a call and institute a dialling tone for another call or to get another call from "Call Waiting" (a special telephone service).

NOTE: If you do not have any special telephone service, such as Call Waiting, pressing **FLASH** button during a call may disconnect your current conversation.